 
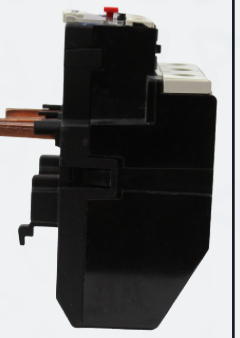 


Relé de Sobrecarga LR2


	MODELO			
	Lr2 - D13	Lr2 - D23	Lr2 - D33	Lr2 - D43
Faixa de Ajuste (A)				
	1-1,6A 1,6-2,5A 2,5-4A 4-6A 5,5-8A 7-10A 9-13A 12-18A 12-25A 17-25A 23-32A	23-32A 30-40A	23-32A 30-40A 37-50A 48-65A 55-70A 63-80A 80-93A	80-104A 95-120A 110-140A
	CJX2-09 CJX2-12 CJX2-18 CJX2-25	CJX2-25 CJX2-32	CJX2-40 CJX2-50 CJX2-65 CJX2-80 CJX2-95	
	La7 - D13	La7 - D23	La7 - D33	
Suportes				

Dimensões


Relé LR2-D13

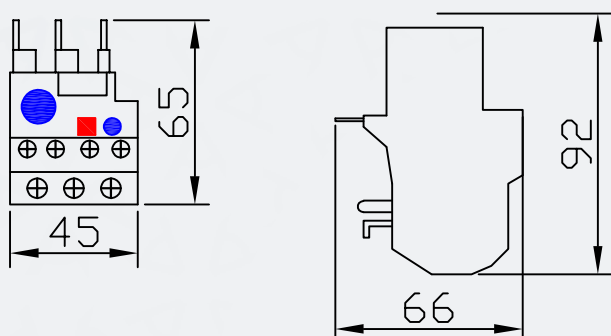

 
Relé LR2-D23

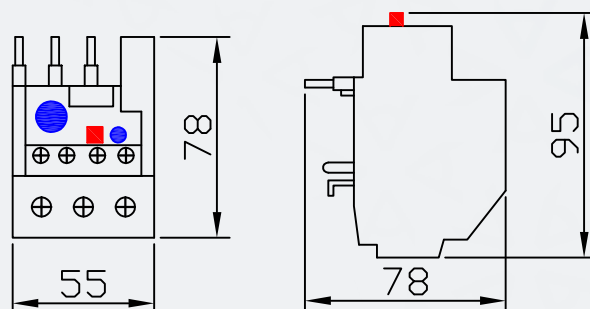

Relé LR2-D33

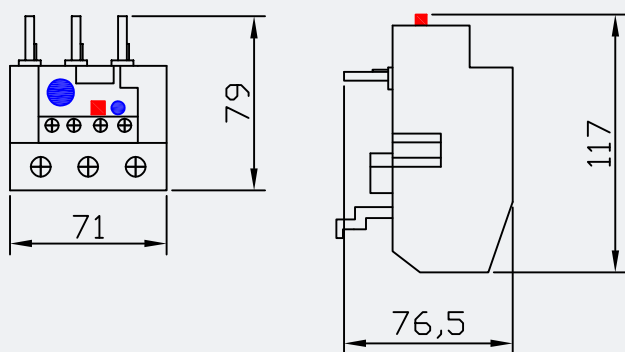 

Relé LR2-D43

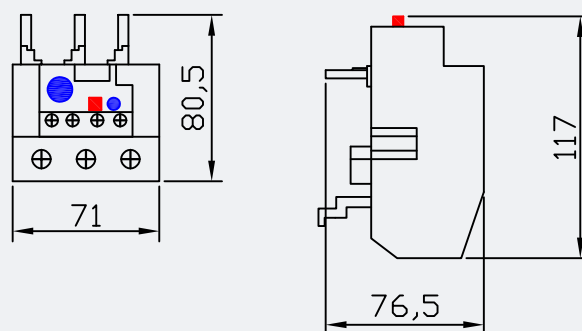 

MODELO	A	B	C
Lr2 - D13	45	92	41
Lr2 - D23	55	92	59
Lr2 - D33	70	120	95